
XFORM 9:1

MODULAR 9:1 UNUN

Quick Start Guide

SLOPER CONFIGURATION

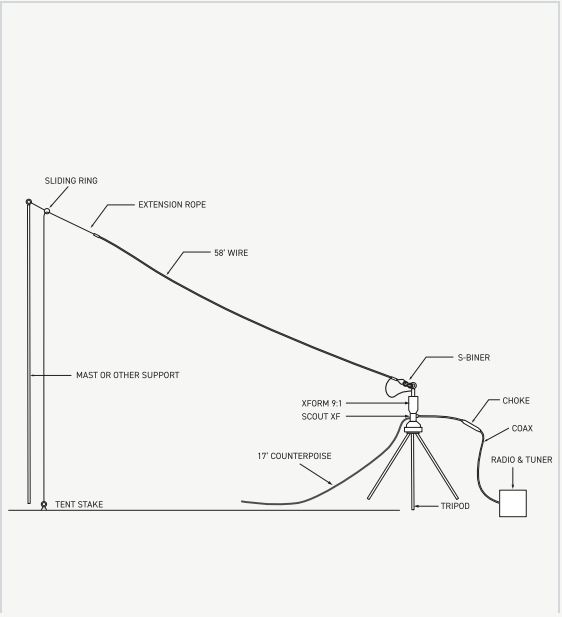


- Support and secure the radiator wire.
- Mount the XFORM 9:1 at the feed point.
- Connect radiator and counterpoise.
- Connect choke and coax to the radio.
- Tune and operate.

OPERATING CHARACTERISTICS

- Quick field deployment.
- Radiation pattern varies with installation.
- External antenna tuner required.
- Multiband operation depends on installation.

INVERTED-L SLOPER CONFIGURATION

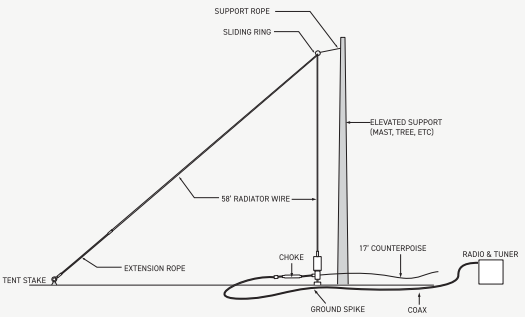

- » Mount the XFORM 9:1 on a suitable ground spike.
- » Connect the counterpoise.
- » Hoist the radiator over a single elevated support.
- » Secure the far end with extension rope and a ground stake.
- » Connect choke and coax; tune and operate.

OPERATING CHARACTERISTICS

- » Single elevated support.
- » Mixed-angle radiation varies by installation.
- » External antenna tuner required.
- » Multiband operation depends on installation.