
XFORM 9:1 END FED KIT

Quick Start Guide

DIRECT FEED WIRE ANTENNA SYSTEM

DIRECT FEED SLOPER

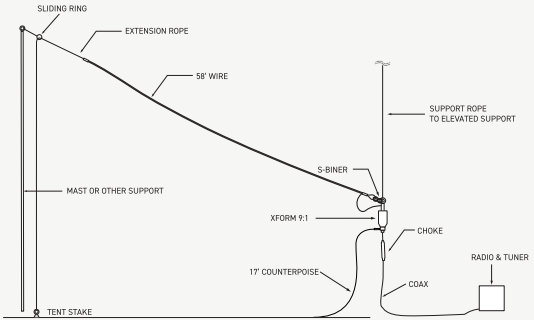


- Install the Direct Feed Adapter on the XFORM 9:1.
- Connect the 58 ft radiator and 17 ft counterpoise.
- Raise and support the feedpoint and radiator using suitable supports.
- Secure the wire and extension rope without overtensioning.
- Connect a choke and coax; tune before transmitting.

OPERATING CHARACTERISTICS

- Suspended feedpoint; no Scout XF required.
- Use the included wire deployment hardware.
- External antenna tuner required.
- Keep wires clear of electrical lines.

FLAT TOP RANDOM WIRE

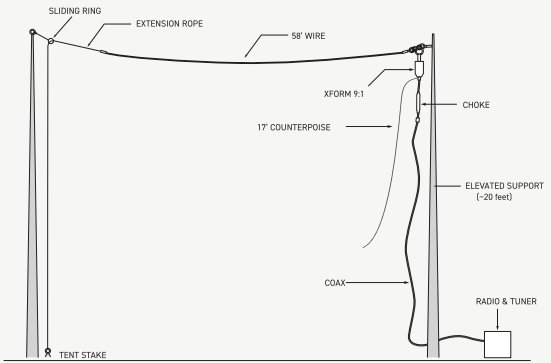

- Install the Direct Feed Adapter on the XFORM 9:1.
- Connect the radiator and counterpoise to the matching unit.
- Suspend the feedpoint and support the far end of the radiator.
- Secure the wire and rope without excessive tension.
- Connect a choke and coax; tune before transmitting.

OPERATING CHARACTERISTICS

- Two elevated support points are typically used.
- Feedpoint and radiator must be securely supported.
- External antenna tuner required.
- Performance depends on height and surroundings.