


# XFORM 4:1

Modular Impedance Matching System

## Quick Start Guide

### RYBAKOV VERTICAL

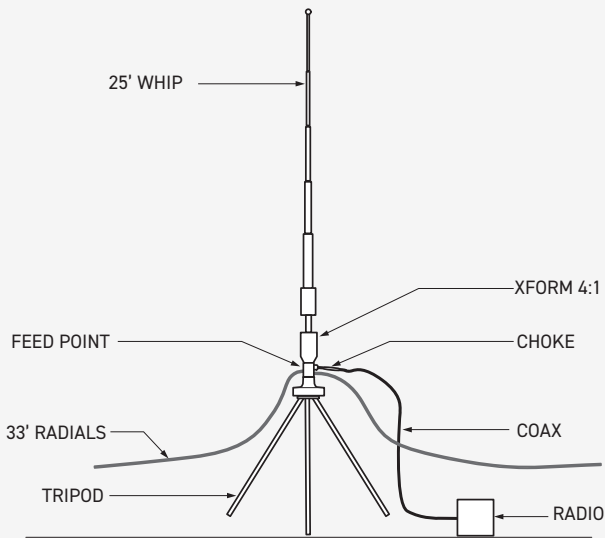


- » Fully extend the whip
- » Connect radials (4)
- » Connect choke & coax to XFORM 4:1
- » Connect coax to radio
- » Tune & operate

### NOTES

- » Low-angle radiation ideal for DX
- » Requires tuner and radials
- » Multi-band operation

## DELTA LOOP

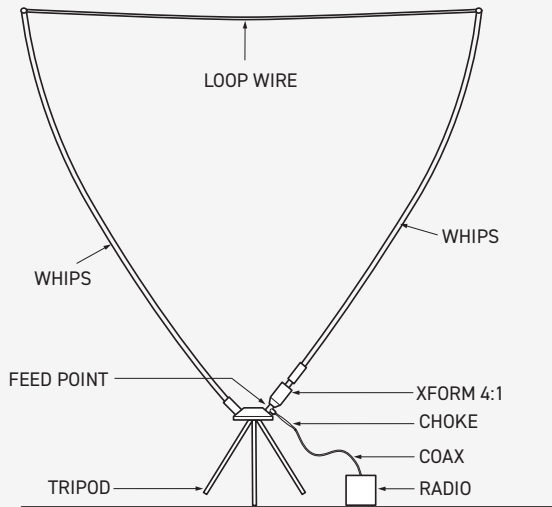

- » Attach wire between collapsed whips
- » Fully extend the whips to form the loop
- » Connect choke & coax to XFORM 4:1
- » Connect coax to radio
- » Tune & operate

### NOTES

- » Lower noise than verticals
- » Requires tuner
- » Multi-band operation

